Updating the Driver Windows 98 SE To update the driver software, you must replace the older version residing on your PC with the more recent version. The procedure for updating the Driver is described below.



Double-click the My Computer icon on the desktop (PC screen). Note: While the actual items displayed on the Desktop will vary from computer to computer,

the My Computer icon in most cases will be found in the upper left of your screen.

Double-clicking My Computer displays the following window. Double-click Control Panel in the window.

Control Panel						_0	×
<u>Eile E</u> dit <u>V</u> iew <u>G</u> o F <u>a</u> vorite	s <u>H</u> elp						£.
Back Forward Up	X	Copy Pas	le Undo	Delete F	Properties View		
Address 🐼 Control Panel							٠
Control	Accessibility Options	Add New Hardware	Add/Remove Programs	BDE Administrator	Date/Time	Display	*
Panel	A.	2	<b>S</b>		2	0	H
System	Fonts	Game Controllers	Internet Options	Keyboard	Modems	Mouse	
information and changes advanced settings.	5 <u>(9</u>	<b>₽</b> 2	<b>S</b> ?	<b>\$</b>	ų	ø	
Microsoft Home	Multimedia	Network.	ODBC Data Sources (32bit)	Passwords	Power Management	Printers	
Technical Support	<b>3</b>	1		2	<b>2</b> 2		
	Regional Settings	Sounds	System	Telephony	Users		-
	Prov	ides system infor	mation and chang	ges - 🛄 My C	omputer		16

Double-click System. This displays the following screen.

Double-click System. This displays the following screen.	
System Properties	? ×
General Device Manager Hardware Profiles Performance	
System:         Microsoft Windows 98         Second Edition         4.10.2222 A         Registered to:         sohgen         scalar         50578-335-0590644-03059         Computer:         GenuineIntel         Pentium(r) III Processor         64.0MB RAM	
OK Car	ncel

Click the [Device Manager] tab (circled in the illustration).

System Pr	operties					? ×
General	Device Ma	nager Hardwi	are Profiles	Performan	108	
€ Vie	w devices b	ylype C	View dev	ices by <u>c</u> onr	nection	
0.000000000000000000000000000000000000	CDROM CDROM Disk drive Display ad Floppy dis Floppy dis Floppy dis Scala Mantos Mouse Network 4 Other dev Other dev PCI M	s laptess k controllers controllers USB Shot USB Shot dapters ices and utimedia Audio utimedia Video	Device			4
Pro	opertie:	Rejresh	B	gmove	Prigt	Ī
				DK.	0	incel

Double-click [Imaging Device] (part (1)). The name of the driver (Scalar USB Shot) is displayed. Double-click Scalar USB Shot (part (2)). The following screen is displayed.

Genera Driver Scalar USB Shot Device type: Imaging Device Manufacturer: Divio Hardware version: Not available Device status This device is working properly.
Scalar USB Shot Device type: Imaging Device Manufacturer: Divio Hardware version: Not available Device status This device is working properly.
Device type: Imaging Device Manufacturer: Divio Hardware version: Not available Device status This device is working properly.
Manufacturer: Divio Hardware version: Not available Device status This device is working properly.
Hardware version: Not available Device status This device is working properly.
Device status This device is working properly.
This device is working properly.
Device usage
Disable in this hardware profile
Exists in all hardware profiles
OK Cancel

Click the Driver tab (circled in the illustration).



Click the [Update Driver (U)] button. The following screen is displayed.



Click [Next].

Update Device Driver V	Vizard
	What do you want Windows to do?  Search for a better driver than the one your device is using now. (Recommended)  Display a list of all the drivers in a specific location, so you can select the driver you want
	<back next=""> Cancel</back>

Specify the search method. Select [Display a list of all...]. (1) After making the selection, click [Next]. (2)

Update I	Device Driver Wizard
2	Select the manufacturer and model of your hardware device. If you have a disk that contains the updated driver, click Have Disk. To install the updated driver, click Finish.
Manufac	cturers: Models:
Kodak	Kodak DC-120 Digital Camera Kodak DC-25 Digital Camera
	<u>H</u> ave Disk
	< <u>B</u> ack Next > Cancel

Click the [Have Disk (H)] button.



When the screen shown above is displayed, click the [Browse...(B)] button.

Open		? ×
File <u>n</u> ame:	Eolders: C:\My Documents\Driver	OK Cancel
	Drives:	

Next, specify the location of the driver. For the sake of example, we'll assume that the driver is located on the CD-ROM.

Click the [Drive (V)] button circled in the illustration).

Clicking the button displays the different drives available on your system. Select a drive. Continuing with the example, we'll select CD-ROM drive d: here. The following screen is displayed.

Open		? ×
File <u>n</u> ame: *.inf	Eolders: d:\ d:\ Driver On Screen Manuals! USB Shot	OK Cancel
	Drives:	



Specify the location of the driver. Here, double-click the Driver folder on the CD-ROM. ((1)) When the file name (Pcam2.inf) is displayed, click the [OK] button. ((2))

Install Fr	om Disk
9	Insert the manufacturer's installation disk into the drive selected, and then click OK. Cancel
	Copy manufacturer's files from:
	D:\Driver  Browse
Click the	e [OK] button.
Update I	Device Driver Wizard
Models:	Select the manufacturer and model of your hardware device. If you have a disk that contains the updated driver, click Have Disk. To install the updated driver, click Finish.
Scalar	JSB Shot [12-14-2000]
	Have Disk
	< <u>B</u> ack Next > Cancel

When the screen shown above is displayed, click the [Next] button.

Update Driver Warning 📉 🔣
Windows detects that your current driver may be a closer match for your hardware device than the driver you have selected. Are you sure you want to use the driver you selected?
<u>Yes</u> <u>No</u>
Click the [Yes (Y)] button.
Update Device Driver Wizard
Windows driver file search for the device:
Scalar USB Shot
Windows is now ready to install the selected driver for this device. Click Back to select a different driver, or click Next to continue.
Location of driver:
D:\DRIVER\PCAM2.INF
< <u>B</u> ack Next > Cancel
Click the [Next] button.
Version Conflict
A file being copied is older than the file currently on your computer. It is recommended that you keep your existing file.
File name: poam.sys
Description: NW802 USB PC Camera Device Driver
Your version: 2.00.19
Do you want to keep this file?
vnen the screen shown above is displayed, click the [Yes (Y)] button.

Update Device Driver W	fizard
	Scalar USB Shot Windows has finished installing the driver you selected for your hardware device.
	< Back Finish Cancel

Driver installation starts. The screen shown above is displayed after a brief interval. Click the [Finish] button in this screen.

Scalar USB	Shot Properties	?	x
General	Driver		_
2	Scalar USB Shot		
Provider:	Divio		
Date:	12-14-2000		
To view o Driver File Update D	details about the driver files loaded for this device, click a Details. To update the driver files for this device, clic priver. <u>Driver File Details</u>	k	
	Close Cano	el	

Click the [Close] button.

System Properti	es	?×
General Devic	e Manager Hardware Profiles Performance	
• View devices by type • • • • • • • • • • • • • • • • • • •		
Compute CDRI CDRI Disk Displ Flopp Hard Keyb Moni Mous Mous Mous Mous Mous Mous Ports Ports Ports	OM drives lay adapters by disk controllers l disk controllers ing Device poard itors se vork adapters r devices PCI Card PCI Multimedia Audio Device PCI Multimedia Video Device s (COM & LPT)	
Properties	Re <u>f</u> resh <u>Re</u> move F	<sup>p</sup> ri <u>n</u> t
	Close	Cancel

Click the [Close] button. This completes the driver update.